


WELD FRAME

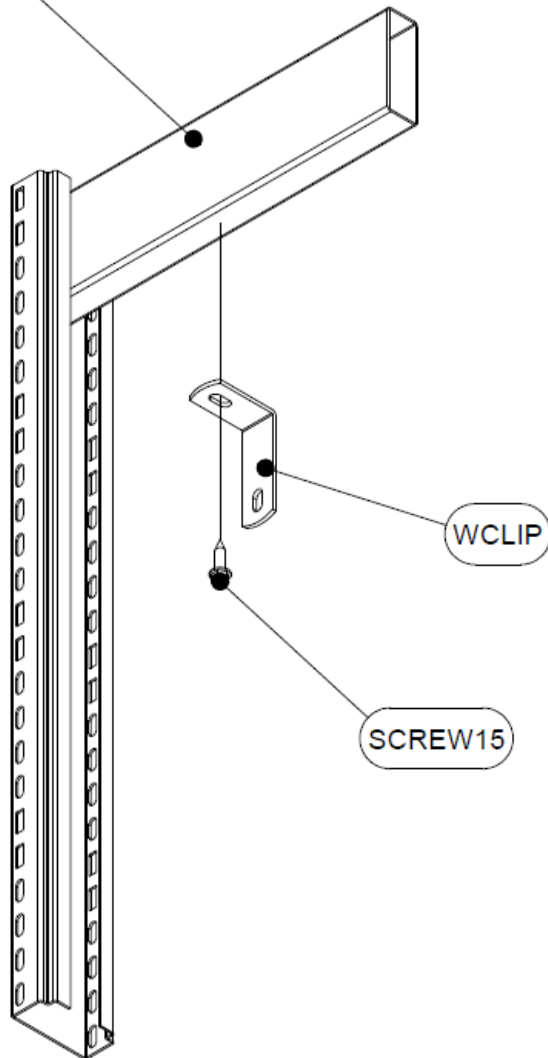

1. Use one wall clip for each frame assembly.
2. Locate wall clip at stud for framed wall construction or in the center of the spreader for masonry construction. Attach the WCLIP to the spreader with the SCREW15.
3. Anchor WCLIP to the wall with appropriate fastener. Fastener is furnished by installer.

ESTEY
DIVISION OF TENNSCO CORP.

WALL CLIP
INSTRUCTIONS

WELD FRAME
DWB 07-05-07